

Installing a Freestanding Frame

There are 3 types of foot used on the frames, Oval, Round and Castor. You will need to install the feet differently depending on which you have.

Round and Oval Feet

- There are 2 types of upright used for each of the feet, if you look at the end of the upright you will either see a small circular hole or a large square hole.

1 The small circular hole will have a threaded insert at one end, this will have a large counter sunk screw which should be removed and passed through the countersunk hole in the foot. While inserted through the foot attach to the threaded upright and tighten with the allen key provided.

2 The large square hole has a rectangular split aluminium profile that tightens internally when fitted.

Remove the screw from the profile and pass through the foot, partially tighten the profile back onto the screw. Insert the profile into the upright and when flush against the foot tighten the screw.



Castor Feet

On the end of each castor foot will be 2 narrow nuts, these should be passed into the slot on the upright at 90 degrees to each other and tightened with the allen key provided.

Cross members

- There are 2 cross members, one for the top and one for the bottom. Each will have an adjustable tensioner protruding from each end. This will be attached to the vertical slot in the upright. Both cross members are the same.
- Insert one of the cross members into the slot at the top of the uprights. This screw may need loosening first. Re-tighten after use.
- **DO NOT OVER TIGHTEN AS THIS WILL CAUSE THE FITTING TO BECOME LOOSE**
- Repeat for the bottom cross member.
- It is recommended that the bottom cross member is located at approximately 150mm from the floor.



Please note, if you have cables or rods to be hung and your delivery note shows CH04 (square toggle) these should be added loosely with the floor and ceiling connections from the top and bottom of the cable or rod before adding the crossbars

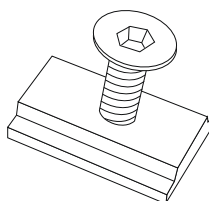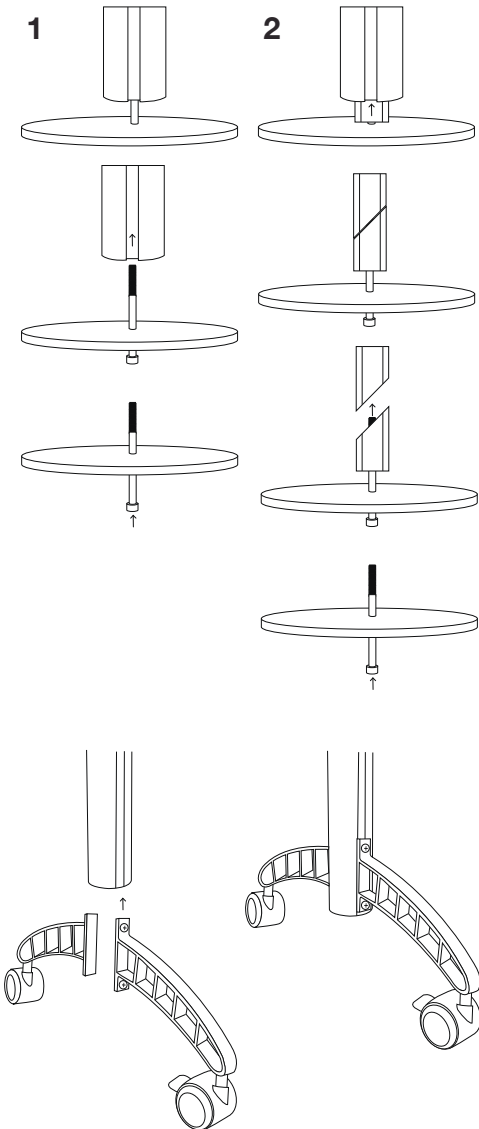

Installing a Freestanding Frame

Fixing a cable or rod to the frame.

- Remove the floor and ceiling connections from either the cable or the rod.
- Pass the screw from the toggle, through the centre of the floor or ceiling connector and loosely connect the toggle, with the screw passing through the raised side of the hole.
- Loosely add these to the cross bars before assembling the frame
- Position the bottom fixing in the location required and tighten the toggle screw, ensuring that the toggle has rotated beneath the sides of the slot before being finally tightened.
- Repeat for the ceiling fixing.
- Do the same to the floor with the fixing plate from the cable tensioner.

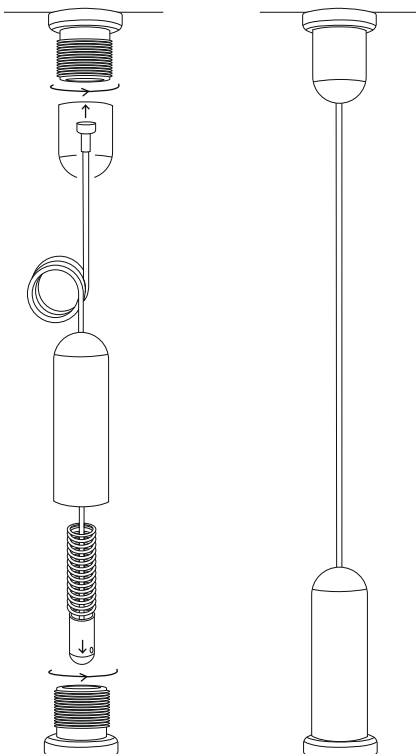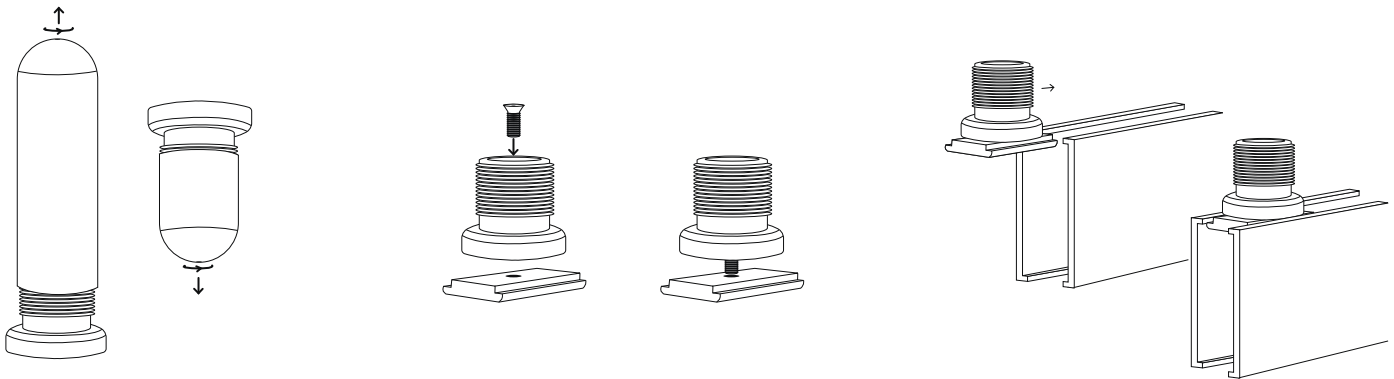

- Hang the cable from the ceiling fixing allowing it to unwind.
- Undo the small brass fitting attached to the cable inside the tensioner with the 1.5mm allen key provided, slide this up the cable and with the cable pulled tight, retighten this fitting flush with the top edge of the floor fixing.
- Cut off the cable so that it sits 5mm below the top edge of the floor fixing.
- Screw the outer body of the tensioner onto the floor fixing.
- You should feel the tension starting to be taken up just before the tensioner is screwed fully down.

Note. Check that the cable will pull gently out against the spring. If there is no movement the tension is too strong and the brass fitting needs to be moved down the cable.

Remember, the cable is only as strong as your ceiling fixing.